

| No. | Description | Qty | No. | Description | Qty |
|-----|---------------------|-----|-----|-----------------------|-----|
| P1 | PUMP | 1 | P30 | CONNECTING ROD | 1 |
| P2 | STEEL BALL | 19 | P31 | HEAD PRESS | 1 |
| P3 | SCREW | 14 | P32 | PIN | 5 |
| P4 | VALVE BALL | 2 | P33 | PIN | 6 |
| P5 | STEEL BALL SEAT | 2 | P34 | COPPER WASHER | 1 |
| P6 | SRING | 2 | P35 | AIR MOTOR | 1 |
| P7 | SCREW | 2 | P36 | CONNECTING FITTING | 1 |
| P8 | SCREW | 2 | P37 | CONNECTING FITTING | 1 |
| P9 | O-RING | 2 | P38 | O-RING | 1 |
| P10 | CAP | 2 | P39 | PUMP CORE SEAT | 1 |
| P11 | STEEL BALL | 1 | P40 | U-RING | 1 |
| P12 | SCREW | 2 | P41 | PUMP CORE | 1 |
| P13 | STEEL BALL | 3 | P42 | CONNECTING ROD | 1 |
| P14 | SRING | 4 | P43 | HANDLE SOCKET | 1 |
| P15 | SCREW | 4 | P44 | PIN | 1 |
| P16 | COPPER WASHER | 4 | P45 | MANUAL SELECTOR VALVE | 1 |
| P17 | OIL HOSE | 1 | P46 | SCREW | 4 |
| P18 | SCREW | 2 | P47 | PIN | 2 |
| P19 | ELBOW | 1 | P48 | CONNECTING FITTING | 1 |
| P20 | BOLT | 4 | P49 | SCREW | 4 |
| P21 | CONNECTING ROD SEAT | 2 | P50 | PUMP COVER | 1 |
| P22 | COPPER WASHER | 2 | P51 | AIR HOSE | 1 |
| P23 | AIR MOTOR | 1 | P52 | AIR HOSE | 1 |
| P24 | CONNECTING FITTING | 1 | P53 | AIR HOSE | 1 |
| P25 | PU HOSE | 1 | P54 | AIR VALVE | 1 |
| P26 | PUMP CORE SEAT | 1 | P55 | O-RING | 1 |
| P27 | PUMP CORE | 1 | P56 | O-RING | 1 |
| P28 | O-RING | 1 | P57 | COPPER WASHER | 2 |
| P29 | PTFE WASHER | 1 | P58 | WASHER | 2 |

